This TechTalk Bulletin will guide you through the steps required to replace the **ScanLogic Basic** EntryPad on a SECURAM safe lock system.

Prepare the New ScanLogic Basic EntryPad for Replacement

Step 1. On the new EntryPad, change the default Manager code to the manager code on the original (old) lock.

Note: The Entrypad does not have to be connected to a lock body to make this code change

Here are the steps to set the old manager code in the new Entrypad.

On the Entrypad press the following buttons: Enter: 000000 Enter the current code (Default 123456) Enter the Manager code of the old Entrypad Repeat the Manager code of the old Entrypad

Step 2. Remove the existing EntryPad from the safe door. To do this, you will need to remove the battery first. Then, push upwards on the Entrypad and you will feel the shoulder bolts release from the mounting holes.

Step 3. Disconnect the lock ribbon cable from the old Entrypad. To do this, first release the cable out of the wire harness. Then, squeeze in the lock tab on the side of the connector (similar to removing a telephone jack) and remove the lock cable from the EntryPad.

Step 4. Now connect the new EntryPad to the ribbon cable on your safe door.

Step 5. Install a new Duracell or Energizer 9 Volt battery.

Step 6. Enter the programmed manager code to open the lock.

The ScanLogic Basic only requires the Manager code to match. The programmed Reset Code or enrolled fingerprints on the old entrypad will not impact pairing or linking of the replacement

SECURAM