

SECURAM EntryPads are not waterproof. Common household cleaning agents should not be used or sprayed on the EntryPad membrane (number pad).

SECURAM recommends lightly wiping with a damp (not wet) alcohol wipe or paper towel. Wipe only the EntryPad membrane. Do not wipe the LCD screen. If liquid penetrates the EntryPad, damage may occur.

