


This TechTalk Bulletin will guide you through the steps required to replace the SafeLogic EntryPad on a SECURAM safe lock system.

Step 1. Remove the existing EntryPad from the safe door. To do this, you may need to remove the battery first. Then, push upwards on the Entrypad and you will feel the mounting holes release from the shoulder bolts.

Step 2. Disconnect the lock ribbon cable from the old Entrypad. To do this, first release the cable out of the wire harness. Then, squeeze in the lock tab on the side of the connector (similar to removing a telephone jack) and remove the lock cable from the EntryPad.

Step 3. On the New Entrypad, you will find a Dip Switch on the circuit board in the back opening, inside the Entrypad (See photo below).

IMPORTANT: Check the back of the old Entrypad. Is there a set of Dip Switches? If yes, be sure to set switches on the New Entrypad to the same as the old. If there is NO Dip Switches, then set the switches in the New Entrypad to **1 up, 2 down, 3 up, 4 down**. To change the switches, use a paper clip or small pointed tool. If the switches are different from 1 up, 2 down, 3 up, 4 down, the new EntryPad will not be able to communicate with the older lock.

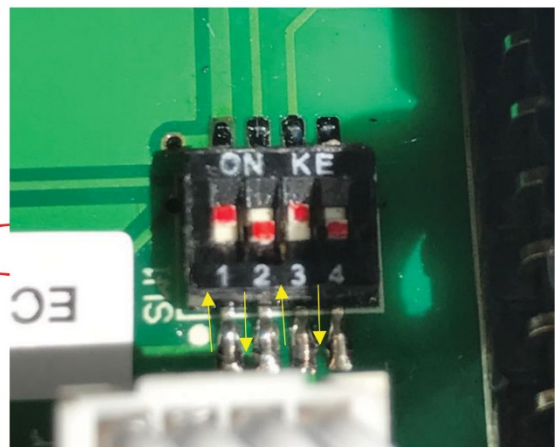

Step 4. Now connect the new EntryPad to the ribbon cable on your safe door.

Step 5. Install a new Duracell or Energizer 9 Volt battery.

Step 6. Enter your existing code to open the lock.