

This TechTalk Bulletin will guide you through the steps required on how to change the battery on the SafeLogic Xtreme.

IMPORTANT: Use a brand new 9V ALKLINE battery only. Recommended batteries: Energizer or Duracell brand.

Step 1: Pull up on the SpinDial release to disengage the electronics. Rotate the Dial 180 degrees to "50". (Fig 1)

Step 2: Loosen the bolt of the EntryPad/DialRing assembly to remove the EntryPad. (Fig 1)

Step 3: Remove the EntryPad from the DialRing by pulling the EntryPad away from the DialRing.

Note: The Entrypad and dial ring are held together by magnets to prevent the Entrypad from falling off when unscrewing

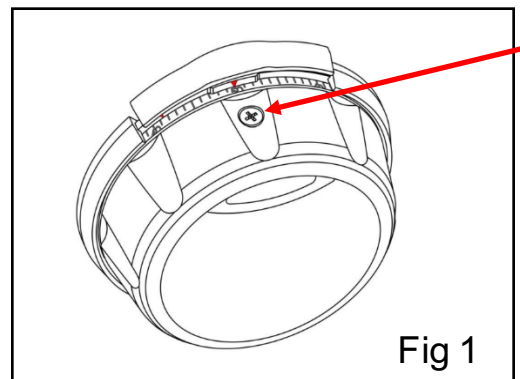


Fig 1

Step 4: Install the 9V ALKALINE battery in the back of the EntryPad. Embossed in the bottom of battery compartment you will see the battery orientation markings: "+" and "-". Install the battery with the correct orientation as indicated by the "+" and "-".



Step 5: Install the Entrypad. and secure the EntryPad onto the DialRing by tightening the EntryPad screw.

Step 6: Pull down the Spin Dial release and try your electronic codes to open the safe door.

If you have any questions, please give our Tech Support a call at (805) 988-8088 M-F 8:30am to 5:00pm PST.